
ORTEGA®

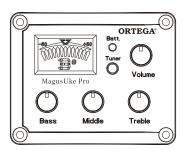

USER GUIDE

MagusUke Pro Onboard Preamp

MagusUke Pro Quick Start

- 1. Set the controls
- Set volume off. Set the bass, middle, treble controls to center.
- 2. Plug in

Connect the MagusUke Pro to an amplifier or PA with a ¼-inch instrument cable. The battery light will flash once quickly to indicate it has switched on.

3. Tune un

Raise the volume and adjust the bass, middle, treble controls to your liking.

MagusUke Pro Controls

- 1. Volume For the cleanest signal, set the volume knob as high as possible, without causing distortion or feedback.
- 2. Bass Boost here to add depth and weight to the sound of the guitar.
- **3. Middle -** Turn the middle knob all the way left for a smooth "scooped out" tone at high volume levels. Raise the middle knob to the right of center to add midrange "bite" to the sound.
- **4. Treble -** boost to cut through the mix. Cut to mellow and subdue the sound.
- **5. Tuner -** Play a single note by your instrument, the string number and note name will shown on the display. The light and indicator change as following:







Meter In Center: The Note Is In Tune



Meter Points Left: Note Is Flat (Too Low)



Meter Points Right: Note Is Sharp (Too High)

Specification

Nominal Input Level: -20dBV Input Impedance: >1M Ohm

Output Impedance: < 2K Ohm (20Hz $^{\sim}$ 20KHz) Nominal Output Level: -12dBV

Nominal Output Level: -12dBV THD: Less than .05% (-20dBV input)

Noise Floor: -97dB

Dynamic Range: 102dB Battery Life: (3V) 100 hours (EQ Working, Tuner off)

Bass Control Frequency: 60Hz Middle Control Frequency: 800Hz Treble Control Frequency: 20KHz